

# **ContainAire**® Hinged Door Autocloser

# **Pictogram User Installation Guide**





## Introduction

Thank you for choosing a Tate Airflow product. Tate Airflow products are engineered to maximize the efficiency of your data center air handling system by isolating cold supply and hot exhaust airflow. We would be interested in hearing any comments you may have on this installation manual, product, or overall experience. Please call or e-mail our Technical Service Department: Phone: 410-799-4200 E-mail: tateinfo@tateinc.com

## Safety

- Wear personal protective equipment (PPE) when drilling, cutting, or installing. PPE includes gloves, safety eyeglasses, hardhats, etc.
- Do not leave the site unattended until the installation is complete.

00

#### **Included Components**

- A 1 x Mounting Bracket
- B 1 x Autocloser
- C 2 x Roll In Double T-Nuts
- D 2 x Roll In Single T-Nuts
- E 4 x M6x20mm FHSCS
- F 2 x M6x16mm BHCS



00










NOTE:

T-nuts can be 'rolled' in and out of the extrusion. No need for disassembly

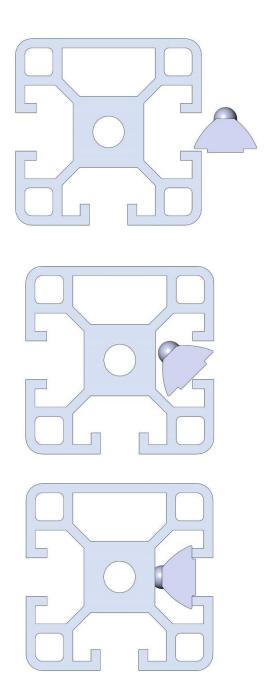





#### <u>STEP 1:</u>

Remove or offset Double Ball Catch. This is not needed with an autocloser.



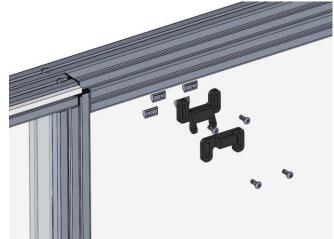


<u>STEP 2:</u> Mount Autocloser Plate to Header.

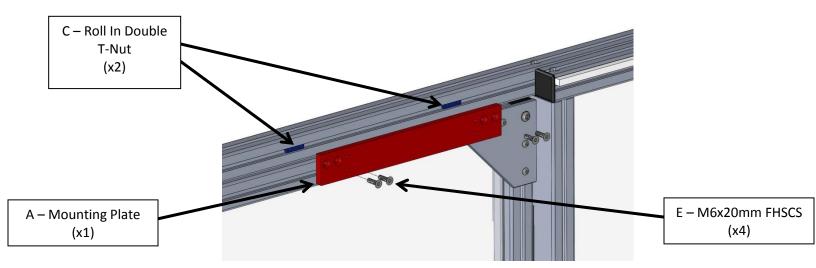



<u>STEP 3:</u>

Locate Mounting Plate along Header, and tighten the screws to lock in place.

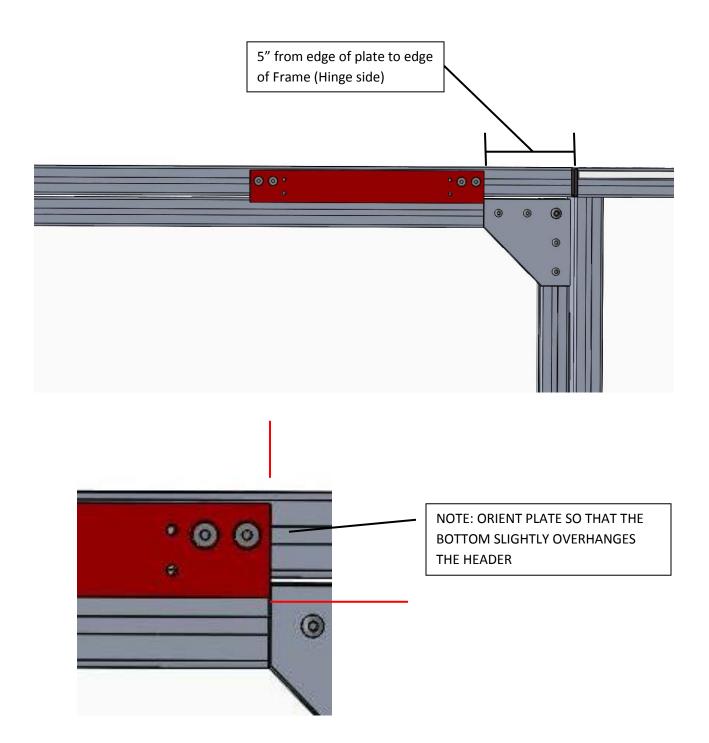





### <u>STEP 4:</u>

Mount the Autocloser body to the mounting plate.

Orient the Autocloser body so that the side with the two adjustment screws, are facing the hinge side of the door.

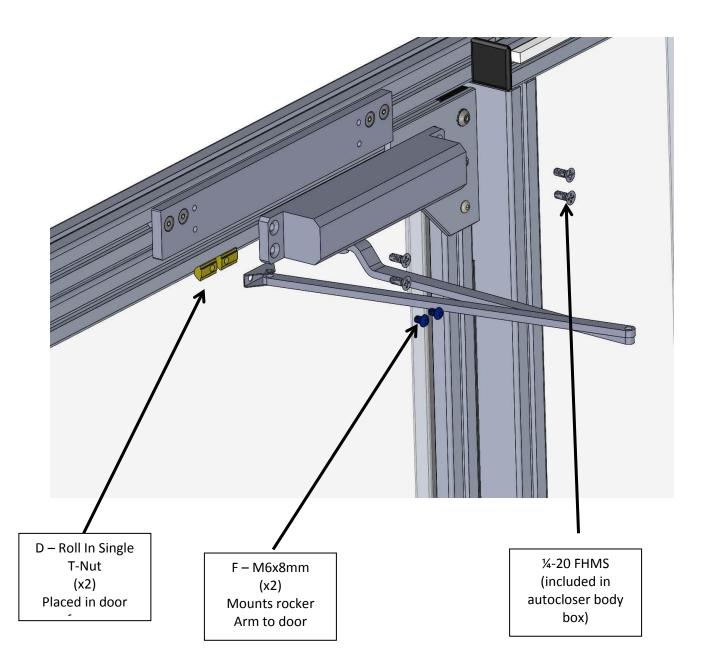



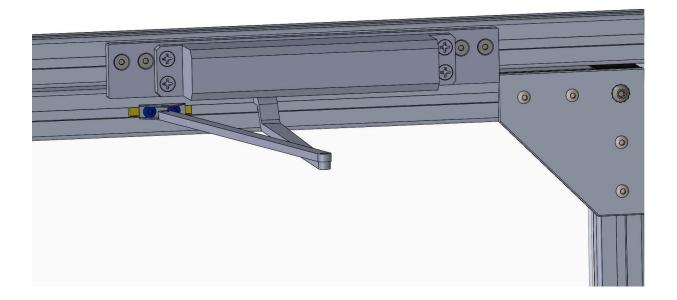

# Thank you for using Tate Airflow!